


**Natural Range
Dry Verge System**



Components



Step 1

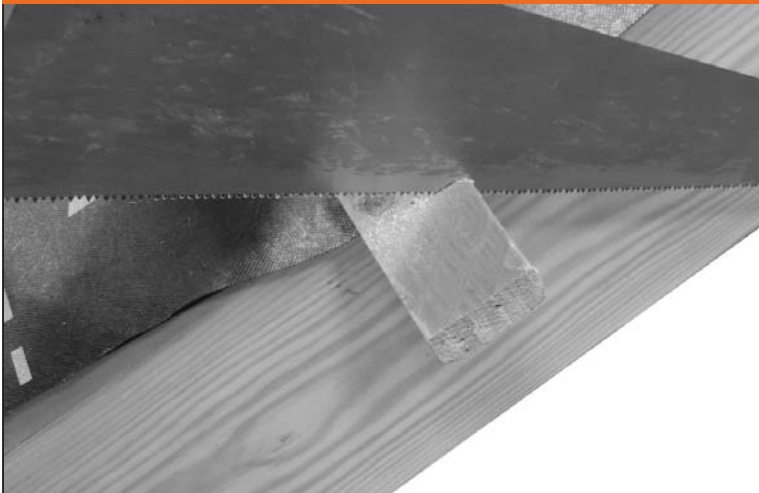

Images show installation of Right Hand units

Cut the tiling battens to overhang the verge by 45mm. The underlay must not extend more than 10mm past the verge.

Step 2

Position the eaves course tile and locate the **Natural Dry Verge Unit** over the tile. Insert the **Natural Eaves Stop End** and mark the position.



**Natural Range
Dry Verge System**

Step 3

Remove the tile and **Natural Dry Verge Unit** and secure the **Natural Eaves Stop End** with 2No. 30mm x 2.65mm galvanised clout nails (not supplied).



Step 4



Place the **Natural Dry Verge Unit** on the tile and slide them down onto the **Eaves Stop End** ensuring that the fin has engaged.

Step 5

With the back of the **Natural Dry Verge Unit** pressed firmly down, nail through the appropriate hole with a 50mm x 3mm alloy clout nail (not supplied)

Repeat instructions 1 – 5 for the opposite verge (if present)



